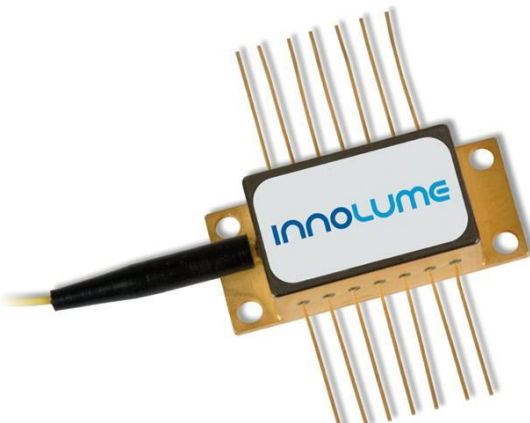


LD-1310-COMB-8 Fiber coupled Comb Laser Diode @ 1310 nm	
	<p>Features:</p> <ul style="list-style-type: none"> • Single chip InAs/GaAs Quantum Dot based diode laser • Standard communication wavelength: O-band • Minimum 8 low RIN individual Fabry-Perot modes • Equidistant temperature insensitive channel spacing • Spliced optical Isolator • Polarization Maintaining fiber <p>Applications:</p> <ul style="list-style-type: none"> • Multi-channel source for DWDM communications <p>Description: Quantum Dot based diode laser operating as an optical frequency comb generator. Device provides several low noise 80GHz spaced optical modes at about 1310nm. Packaged in convenient 14-pin butterfly housing the device is dedicated for the development and evaluation of novel optical interconnects based on WDM technology.</p>
Specification	DATE: 4 th June. 2013



SPECIFICATIONS					
Test conditions: CW operation at 25°C					
Parameters	Symb.	Min.	Typ.	Max.	Unit
Total Output power	P_{out}	25	30		mW
Central wavelength ¹	λ_c	1300	1310	1320	nm
Optical Power per channel			2		mW
Number of channels (<-3dB difference)		8	12		
Channel spacing ²		78	80	82	GHz
Individual FP mode (channel) RIN (averaged in 0.1-8GHz range)				-125	dB/Hz
Laser Diode power conversion efficiency ($P_{out}/I_{op}/V_f$)	WPE	9			%
LD Threshold current	I_{th}		20	30	mA
LD Operating current	I_{op}		160	180	mA
LD Forward voltage	V_f		2.1	2.3	V
Bias Voltage ³	V_a		4		V
Polarization extinction ratio	PER	15	18		dB

¹ 1150 to 1330nm upon request

² 25-100GHz mode-spacing upon request

³ 0V Bias Voltage upon request

ABSOLUTE MAXIMUM RATINGS			
Parameters	Min.	Max.	Unit
Laser Diode reverse voltage		2	V
Operating current		250	mA
Thermo Electric Cooler current		3	A
Thermo Electric Cooler voltage		4	V
Storage temperature range (in original sealed pack)	-30	85	°C
Case operating temperature range	5	80	°C
Lead soldering temperature (max 5 sec.)		250	°C

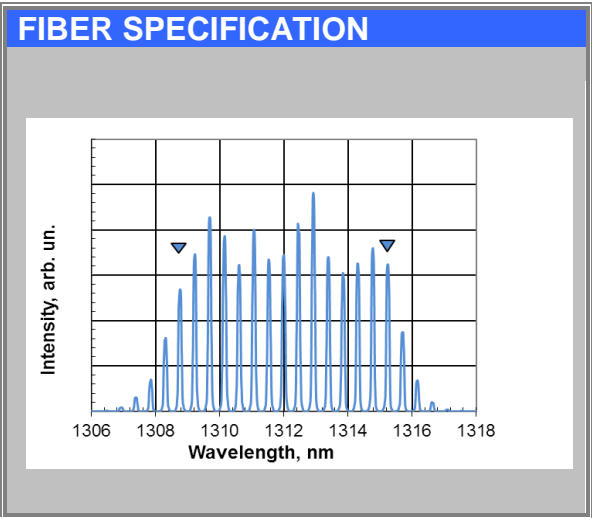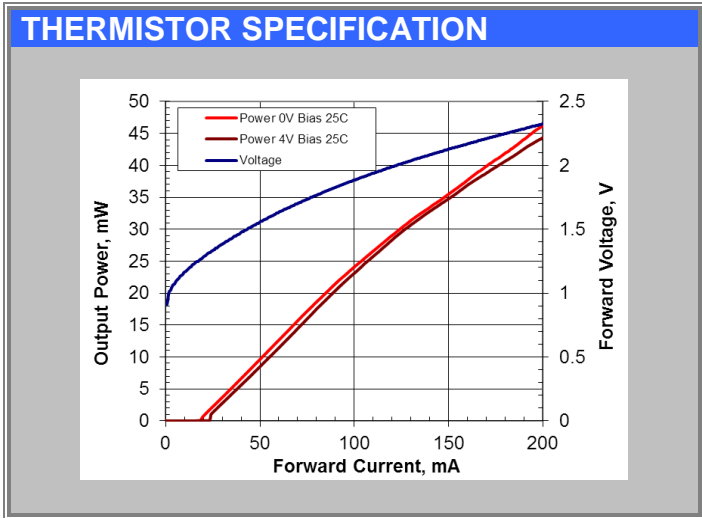

An exemplary Eye Diagram of one F-P mode

Externally modulated at 2.5GHz filtered-out single channel




The screenshot shows an eye diagram software interface. The main window displays a green eye diagram with a gray mask overlay. The mask is a diamond shape with rounded corners. The interface includes a menu bar (File, Control, Setup, Measure, Calibrate, Utilities, Help), a toolbar with buttons for Eye Meas, Mask Test, and Filter, and a status bar at the bottom with various settings.

Mask Test Results:

INF INIBAND			
total wfms	1.000 k	margin	50 %
failed smpls	0	mask hits	0
source	2	margin hits	0
V Align: Full	Disp	total hits	0

Bottom Panel Settings:

- 1 200 μ W/div / 200.0 μ V
- 2 15.0 mV/div / -10.0 mV
- 3 4 Precision Timebase... / Reference: 9.953280 GHz
- Time: 50.0 ps/div / Delay: 24.2480 ns
- Trig: Normal / -200 mV
- Pattern Lock

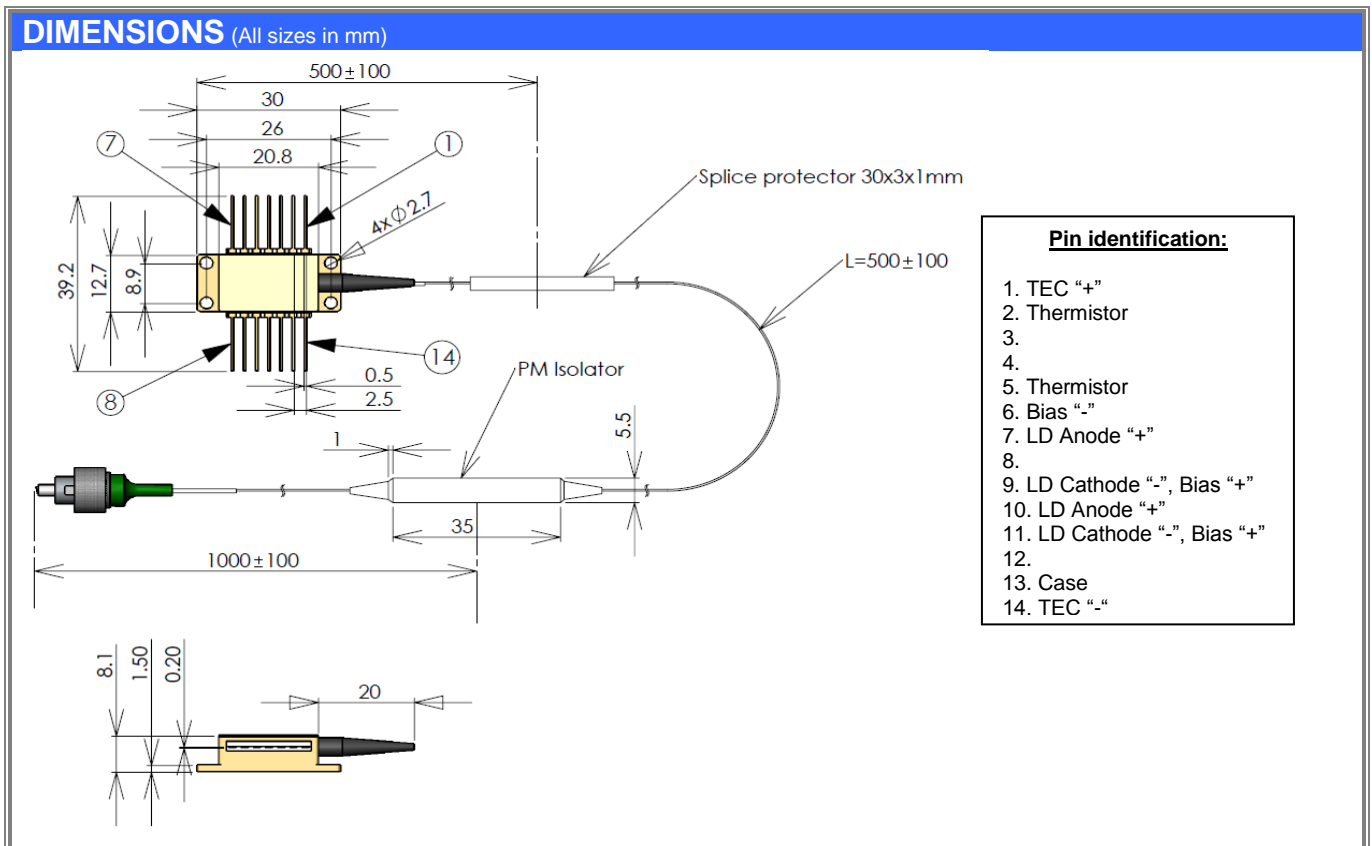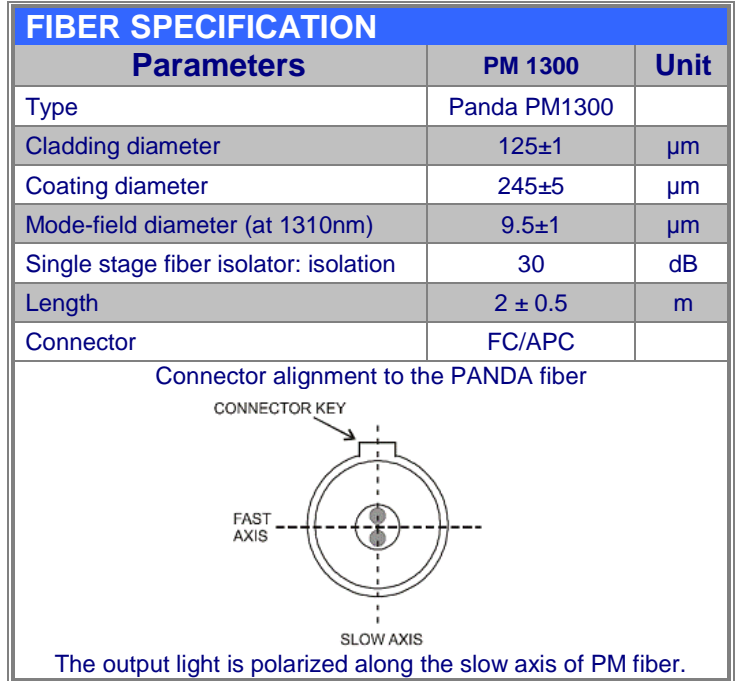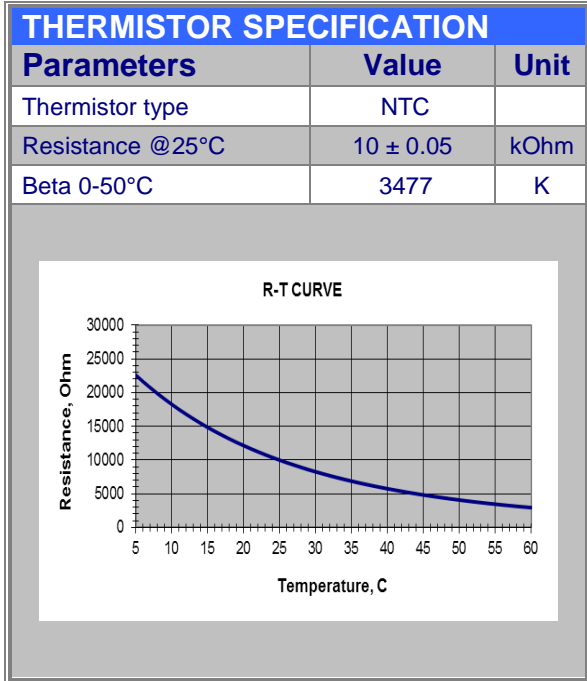


SAFETY AND OPERATING INSTRUCTIONS

The laser light emitted from this module is invisible and will be harmful to the human eye. Avoid looking directly into the fiber output or into the collimated beam along its optical axis when the device is in operation. Proper laser safety eyewear must be worn during operation.

Absolute Maximum Ratings may be applied to the Laser Diode for short period of time only. Exposure to maximum ratings for extended period of time or exposure above one or more max ratings may cause damage or affect the reliability of the device.

Operating the laser diode outside of its maximum ratings may cause device failure or a safety hazard. Power supplies used with the component must be employed such that the maximum peak optical power cannot be exceeded. A proper heatsink for the laser diode module on thermal radiator is required.

ESD PROTECTION – Electrostatic discharge is the primary cause of unexpected laser diode failure. Take extreme precaution to prevent ESD. Use wrist straps, grounded work surfaces and rigorous antistatic techniques when handling laser diodes.

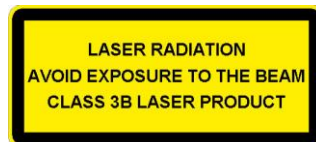

NOTE: Innolume product specifications are subject to change without notice.